




BMW M4er-Reihe G83 Convertible 11/2020

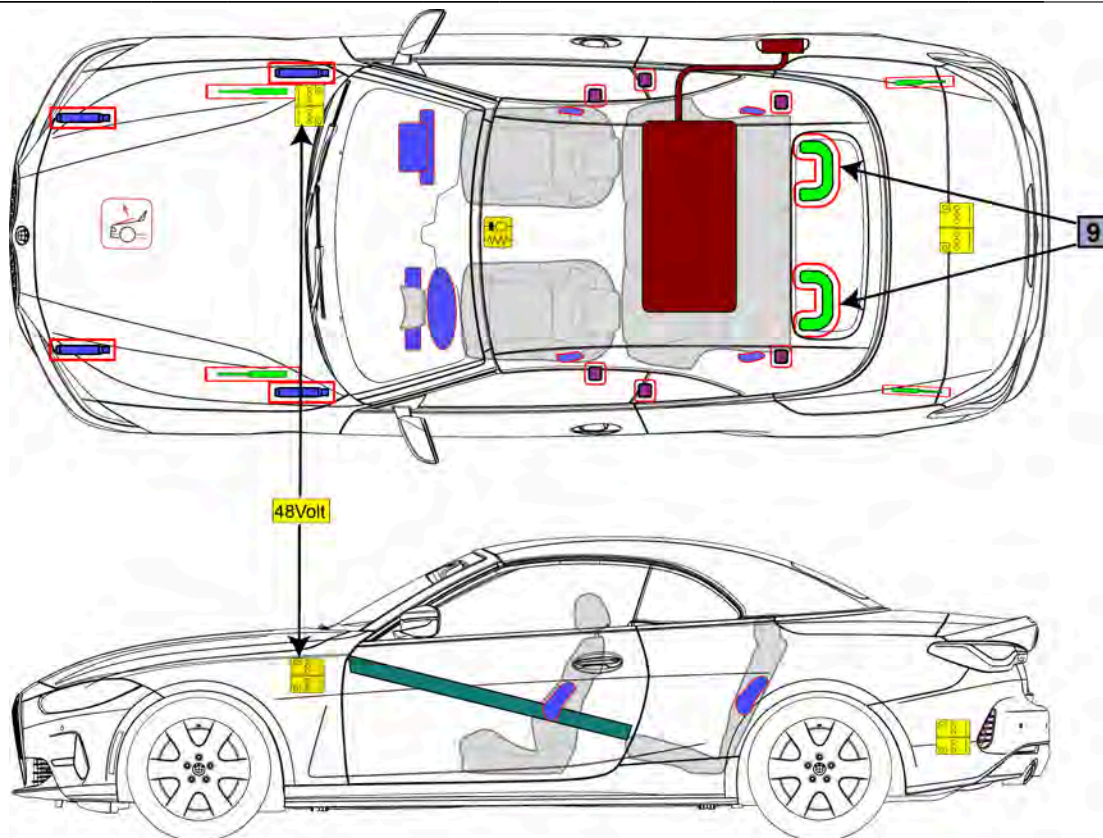

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit		Pedestrian protection active system
	Automatic rollover protection system		Gas strut / Preloaded spring		High strength zone		Battery low voltage 12V/48V ¹		Fuel tank content gasoline/ethanol

¹Switch off the ignition to avoid the risk of an electric arc when disconnecting.

1. Identification / recognition

2. Immobilisation / stabilisation / lifting

Immobilisation

1. Press the "Start / Stop" button to switch off the vehicle



2. Automatic transmission: Press the "P" button





2. Manual transmission: Shift to first gear



3. Pull up parking brake



Stabilisation / lifting points

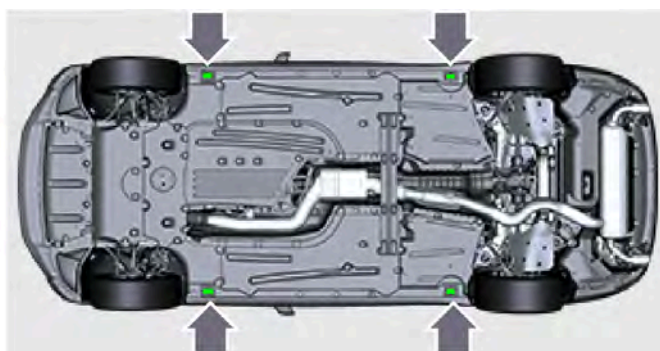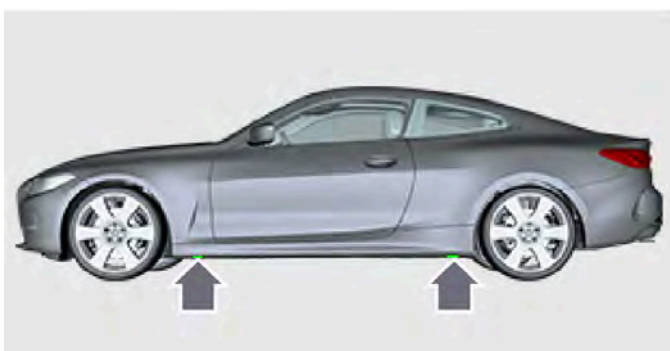


3. Disable direct hazards / safety regulations

4. Access to the occupants

Interfaces

- 1 Interfaces in order to remove the roof
- 2 Door lock
- 3 Door hinge

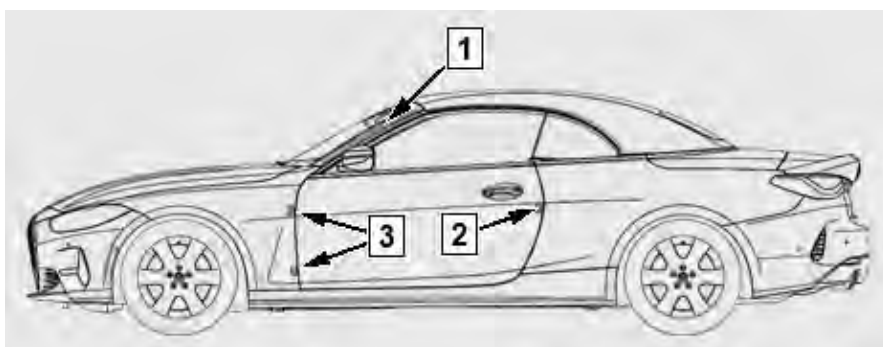

5. Stored energy / liquids / gases / solids

Fuel

Diesel engine: Diesel DIN EN 590
Petrol engine: Petrol 91 – 100 RON

6. In case of fire



There is still a danger of injury even after a fire!

Use personal protective equipment identical to that for conventional vehicle fires.

7. In case of submersion

Vehicle in and under water

After the vehicle has been recovered from the water, disconnect the low-voltage battery (negative terminal).

8. Towing / transportation / storage

Use only the towing eye provided in the vehicle and screw in firmly to the limit position.

Only use the towing eye for towing on a surfaced road. Avoid transverse loads on the towing eye. For example, do not raise the vehicle by the towing eye.



9. Important additional information

This document shows the maximum possible vehicle equipment.

The rollover protection extends in the event of a rollover in order to protect the occupants.