

- ① High-voltage battery
- ② Battery 12 V
- ③ Additional battery, Left-hand drive
- ④ Additional battery, Right-hand drive
- ⑤ High-voltage charge socket
- ⑥ Alternative high-voltage disconnect device, left-hand drive
- ⑦ Alternative high-voltage disconnect device, right-hand drive

Legend

- Airbag
- Gas generator
- Seat belt tensioner
- Restraint systems control unit
- 12 V Battery
- High-voltage battery
- High-voltage components
- High-voltage disconnect device
- Alternative high-voltage disconnect device

DANGER


Danger from electrical voltage

If you commence rescue work before waiting for the capacitor to discharge, there is a danger of electric shock which could result in severe or fatal injuries.

Before commencing rescue work, wait for at least one minute after deactivating the hybrid system and switching off the highvoltage circuit in order to discharge the capacitor in the voltage converter.

High-voltage disconnect device

The high-voltage disconnect device (1) is located on the right side of the engine compartment.

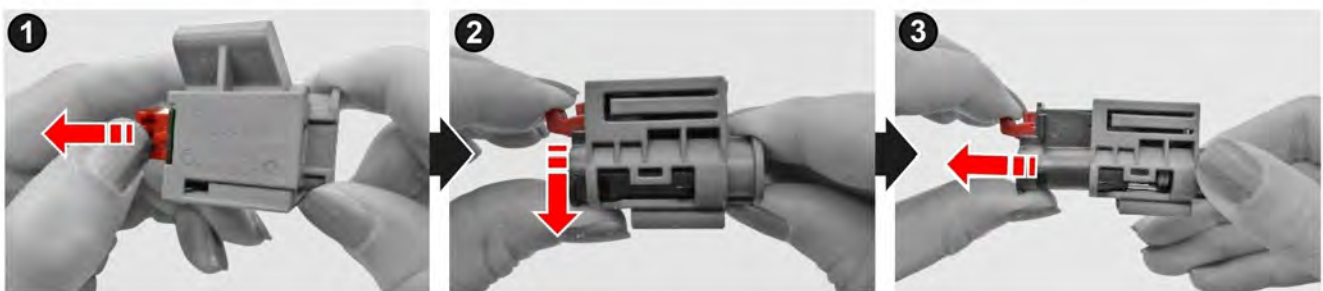

1. Operate release / 2. Push the release downwards / 3. Pull out switch

Alternative high-voltage disconnect device

Alternative high-voltage disconnect device (2) is located in the seat box of the driver's seat.



Note


The alternative high-voltage disconnect device is only to be operated when the high-voltage disconnect device in the engine compartment is inaccessible.



1. Remove cover of fuse box / 2. Cut line at marked location



Vehicle identification

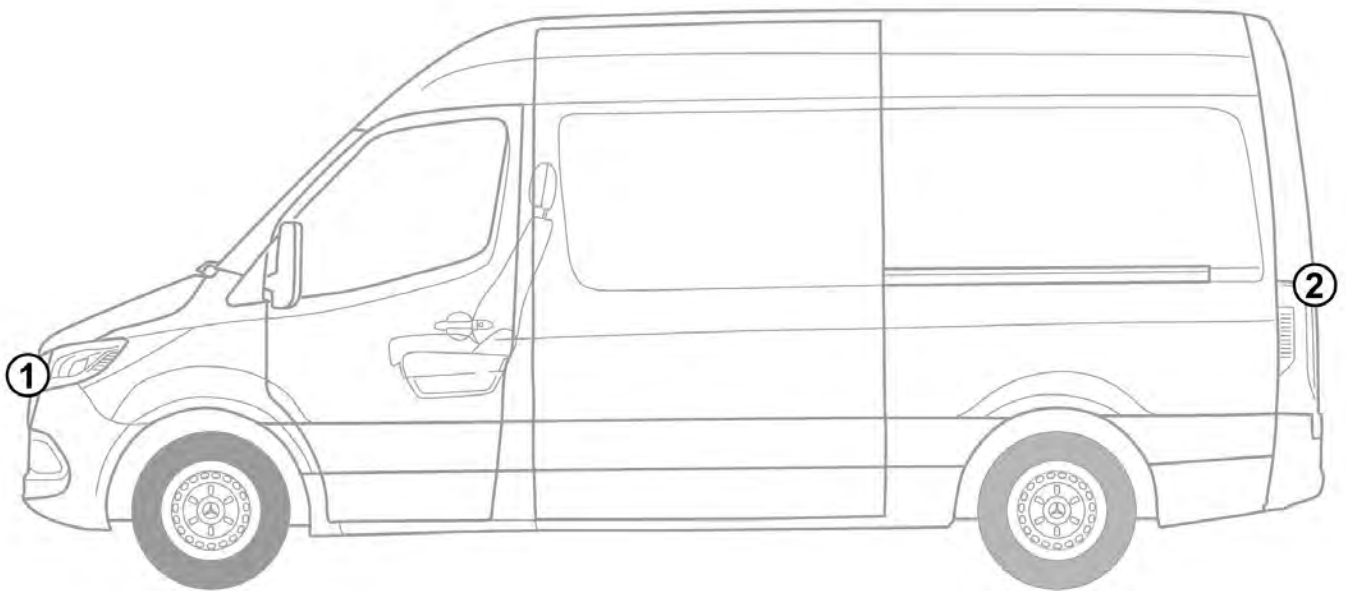

①



②

