


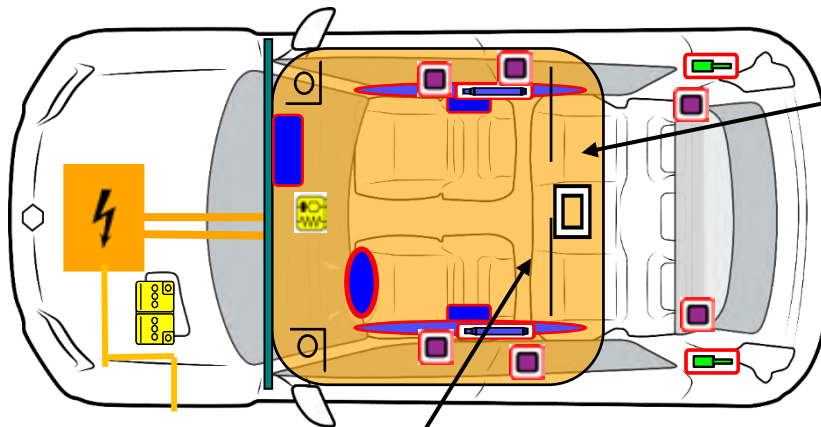


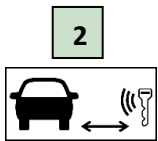

400 V
Li ion

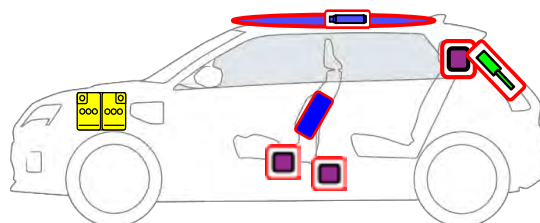

6

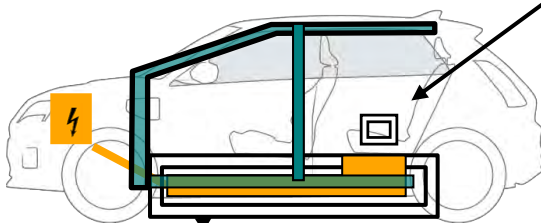

4

	Airbag		Stored gas inflator		Seat belt pretensioner		SRS control unit
	Battery low voltage		Gas strut / Preloaded spring		High strength zone		Zone requiring special attention
	Battery pack, high-voltage		High voltage power cable		High voltage component		

1. Identification / recognition




2. Immobilisation / stabilisation / lifting

Engine shutdown






Forbidden wedge area

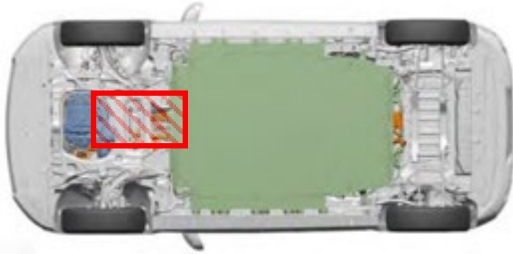

Orange cables area

3. Disable direct hazards / safety regulations

12 Volts Battery

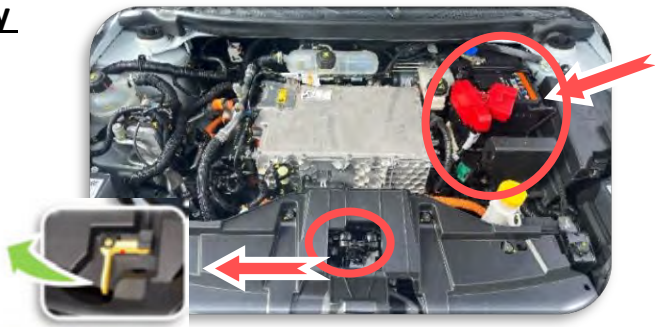

400 Volts Battery




Any airbag triggering guarantees automatic disconnection of the 400V battery:


No disconnection system => no manual action required

Without airbag triggering, in the event of extrication, disconnect the 12V battery


4. Access to the occupants

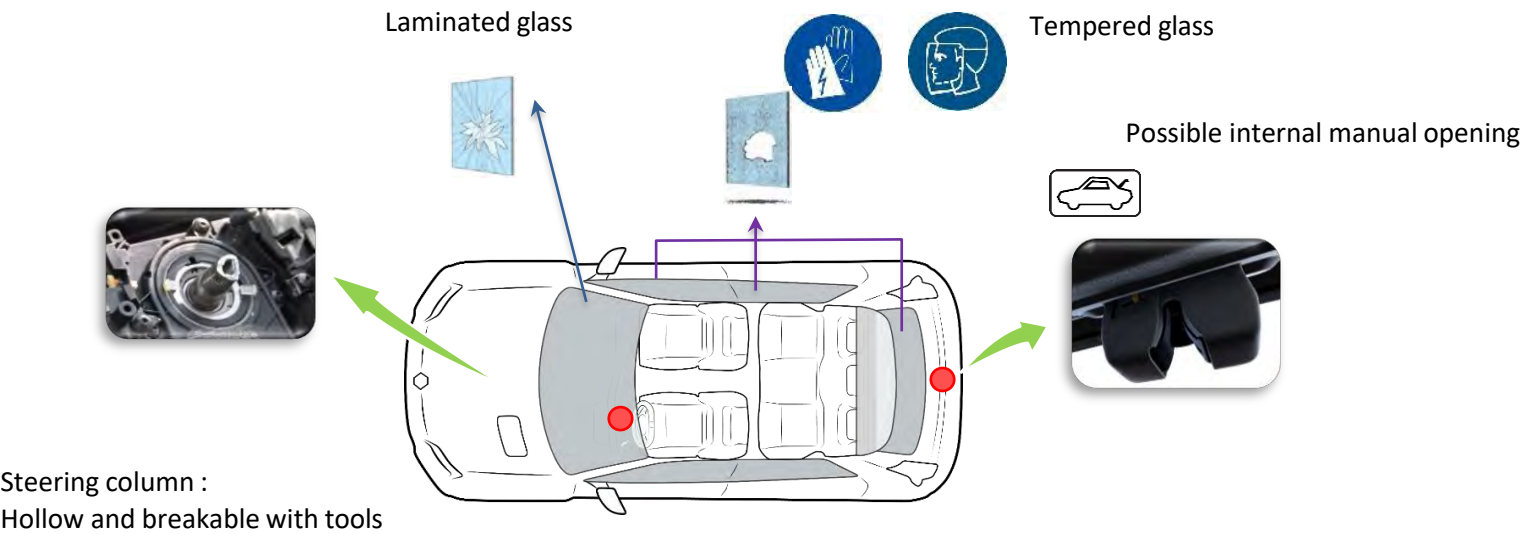

POSSIBLE MOVEMENT OF SEATS

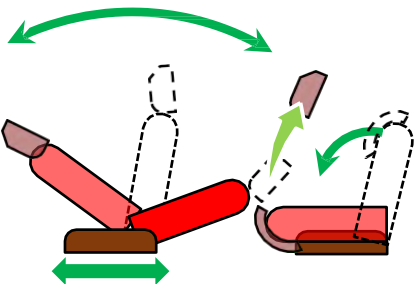

HARDENED STEEL

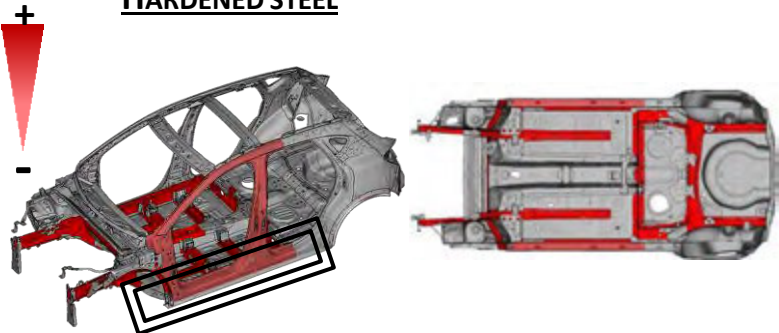


5. Stored energy / liquids / gases / solids

	Lithium-Ion	40/52 kW.h	400 V	Casing Aluminium
---	-------------	------------	-------	---------------------



6. In case of fire

EXTINGUISHING THE ELECTRIC VEHICLE AND ITS TRACTION BATTERY FIRE

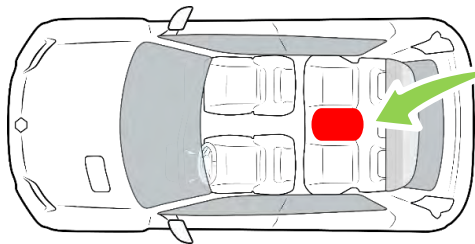


Specific system to put water inside the 400V battery

GAS STRUTS



NO risk of missile effect of gas struts

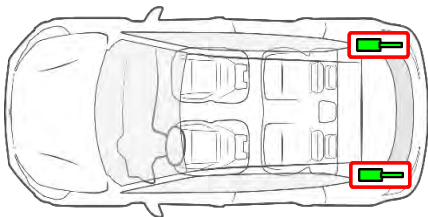

7. In case of submersion



No electrical hazard
After taking the vehicle out of the water : Disconnection of the 12 Volts.

8. Towing/Transport/Storage



10. Explanation of pictograms used

	Electric Vehicle	Specific device designed to put water inside the high voltage battery			
	Remove smart key		Boot		Use thermal Infrared camera
	Flammable		Hazardous to the human health		Environmental hazard
Electrical protection gloves 	Face shield 	Breathing apparatus (BA) 	Use water to extinguish the fire 	Don't break, nor open 	