


C-Class HYBRID PLUS Sedan model 205 as of 2015









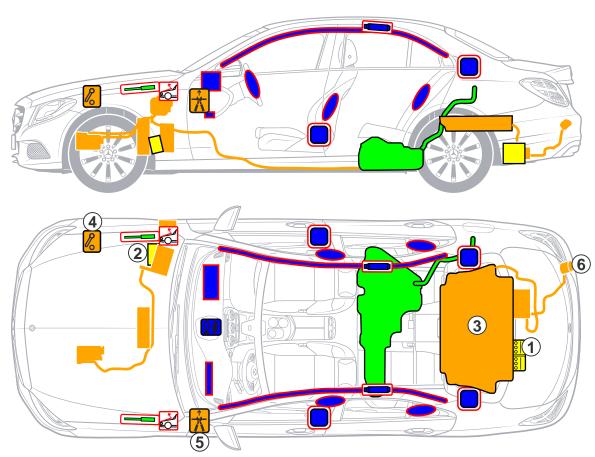

- 1 On-board electrical system battery
- 2 Additional battery
- 3 High-voltage battery
- 4 High-voltage disconnect device
- 5 Alternative high-voltage disconnect device
- 6 HV charge socket



Airbag



Gas generator



Seat belt tensioner



The alternative high-voltage disconnect device is

only to be operated when the high-voltage dis-

connect device in the engine compartment is

Restraint systems control unit



Gas-filled strut



Pedestrian protection



Fuel tank

Note

inaccessible.



Battery 12 V



High-voltage battery



High-voltage components



High-voltage disconnect device




Alternative highvoltage disconnect device

C-Class HYBRID PLUS Sedan model 205 as of 2015



High-voltage disconnect device

The high-voltage disconnect device is located in the engine compartment next to the coolant expansion reservoir on the right (viewed in the direction of travel).

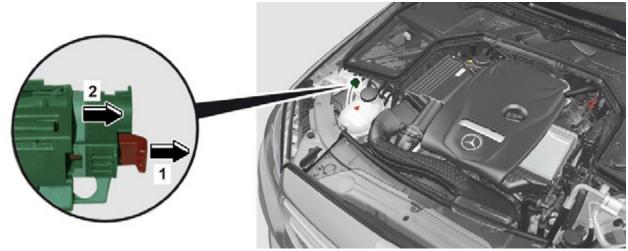

High-voltage disconnect device in engine compartment

Operate release (1) / Pull out switch (2)

Alternative high-voltage disconnect device
The alternative high-voltage disconnect device is located under the cover of the fuse box on the left of the cockpit. It is marked with an information label.


Note

The alternative high-voltage disconnect device is only to be operated when the high-voltage disconnect device in the engine compartment is inaccessible.





Information label on alternative high voltage disconnect device

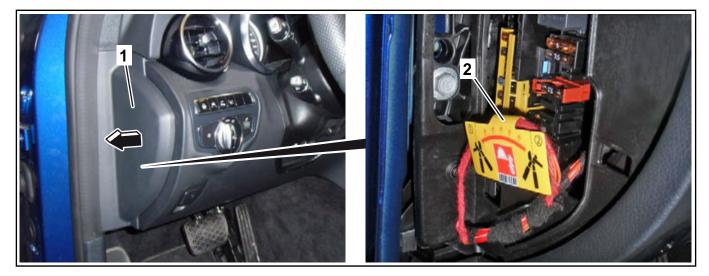

Remove cover (1) of fuse box / Cut line at marked location (2)

C-Class HYBRID PLUS Sedan model 205 as of 2015



Vehicle identification

